



**NEPTUNE**  
TECHNOLOGY GROUP

E-CODER® Quick  
Install Guide



# 1: General Instructions

The E-CODER<sup>®</sup> is an electronic absolute encoder register designed for use with Neptune's Automatic Reading and Billing (ARB<sup>®</sup>) System. This register operates with Neptune's R900<sup>®</sup> and R450<sup>™</sup> MIUs, providing advanced features such as leak, backflow, and tamper detection.

With the E-CODER register, both the homeowner and the utility can use the following features:

- Nine-digit display for visual reading
- Eight digits for billing
- Water flow indicators
- Intermittent and continuous leak detection icon on the LCD panel

This guide helps you identify and read information displayed on the E-CODER register. It also helps you recognize the common causes of leaks and instructs what to do if you find one. This guide contains steps to determine whether a leak is fixed after repairs.

## 2: Product Description

The face of the E-CODER<sup>®</sup> contains reading information.

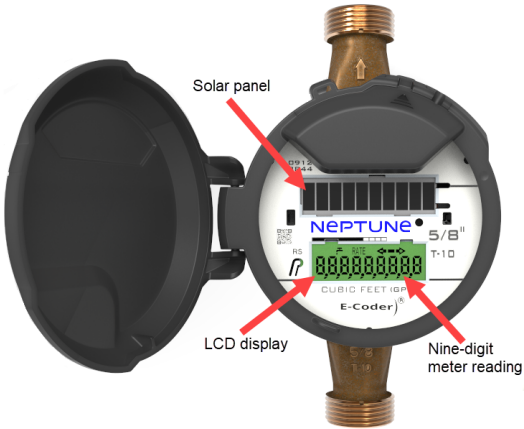


Figure 1: E-CODER<sup>®</sup> Face Plate

## 3: Wiring the Inside Set Version

Follow these steps to run a three-conductor cable from the E-CODER<sup>®</sup> register to the MIU.

1. Connect the three-conductor wire to the encoder register's terminals as described in the manufacturer's instructions, using the color code in step 3. The encoder terminal uses three wires: black, green, and red.

2. Remove the terminal cover with a flat-head screwdriver.

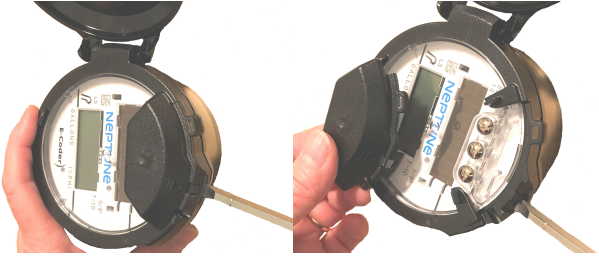


Figure 2: Removing the Terminal Cover



Figure 3: Wiring with Proper Color Wires

3. Wire the encoder register with the proper colors.
4. Test the wiring to verify the read.

5. Route the wires as shown.



Figure 4: Routing the Wire



Figure 5: Applying Compound

6. Apply Novagard® G661 or Dow® Compound #4 to the terminal screws and exposed bare wires.



Neptune recommends Novagard G661 or Dow Corning Compound #4.



Novagard may cause irritation to eyes and skin. If swallowed, do not induce vomiting; dilute with one to two glasses of water or milk and seek medical attention. Please refer to MSDS Novagard Silicone Compounds & Grease Inc. 5109 Hamilton Ave. Cleveland, OH 44114, 216-881-3890. For copies of MSDS sheets, call Neptune's Customer Support at (800) 647-4832.

7. Place the terminal cover on the register, ensuring the wire is routed through the strain relief.



Figure 6: Placing the Cover on the Register



Figure 7: Snapping the Cover in Place

8. Snap the terminal cover in place by pressing on the molded arrow.
9. Proceed to "Activating the E-CODER®" on page 15.

## 4: Wiring the Pit Set Version

Complete the following steps to wire the pit set version. The following figure shows the components required for installation.



Figure 8: Installation Components

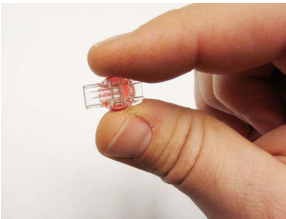



Figure 9: Scotchlok™ Connector

1. Hold the Scotchlok™ between your finger and thumb with the colored cap facing down.




Do not strip the colored insulation from the wires or strip and twist the bare wires prior to inserting them into the connector. Insert the insulated colored wires directly into the Scotchlok connector.

2. Take one non-stripped black wire from the pigtail and one from the receptacle / MIU and insert the wires into the Scotchlok connector until fully seated.

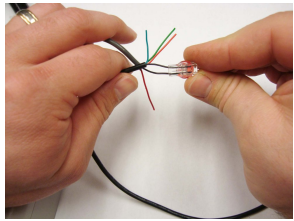


**Figure 10: Seating Connector Wires**

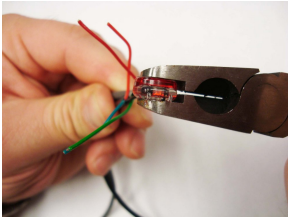

**Figure 11: Crimping Tool**

3. Place the connector color cap side down between the jaws of the crimping tool. For part numbers, see Table 2 on page 14.

4. Check to ensure that the wires are still fully seated in the connector before crimping the connector.

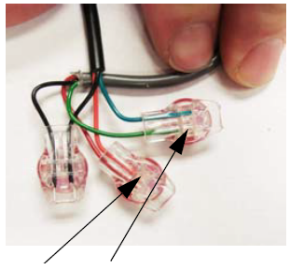

Red and green wires not fully seated

**Figure 12: Improper Connections**


5. Squeeze the connector firmly with the proper crimping tool until you hear a pop and gel oozes out the end of the connector.
6. Repeat steps one through five for each color wire. See Table 1 on page 9 for the wiring configuration to connect Neptune<sup>®</sup> MIUs or competitor MIUs to the E-CODER<sup>®</sup>.



**Table 1: Color Code for Wires**

MIU Wire Color / Encoder Terminal	MIU Type
Black / B Green / G Red / R	<ul style="list-style-type: none"><li>• R900<sup>®</sup></li><li>• R450<sup>™</sup></li></ul>
Black / G Green / R Red / B	Sensus
Black /B White / G Red / R	Itron
Black / G White / R Red / B	Aclara
Black / G Green/ B Red / R	Elster
Black / G Green / R Red /B	Badger

7. After you connect all three colored wires, read the encoder register to ensure proper connections, and that the receptacle / MIU is functioning properly.

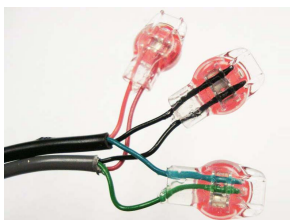

**Figure 13: Three Color Wires Connected**



**Figure 14: Splice Tube**

8. Take all three connected Scotchloks and push them into the splice tube until fully covered by the silicone grease.

9. Separate the gray wires, and place them into the slots on each side of the splice tube.



**Figure 15: Gray Wires in Slot**



Figure 16: Cover in Place

10. Snap the cover closed to finish the installation.

11. Proceed to "Activating the E-CODER®" on page 15.

## 5: Installing Networked Receptacle / Dual Port MIUs



Enhanced R900® v4 MIUs are not dual port capable. These instructions apply only to v3 MIUs.

The Dual Port R900 and R450™ MIUs work only with Neptune® ProRead™ or E-CODER® registers. Each register must be programmed in "RF Network" mode prior to installation.

E-CODER registers cannot be programmed while connected together in a network. Program them separately before making the network connection.



The designations HI and LO are Neptune's designations for the high (HI) flow or turbine side of the compound, and the low (LO) flow or disc side of the compound.



The settings can also be used to designate the primary (HI) and secondary (LO) meters in a dual set application.

## Programming the HI Register

---

Complete the following steps using the Neptune field programmer to select the ProRead Program tab for programming.

1. Select **RF Compound HI** format.
2. Select connectivity **2W**.
3. Match the **Dial Code 65**.
4. Type the appropriate register ID.
5. Program the register.
6. Read or query the register to confirm correct programming as shown in this figure.



Figure 17: HI Register

## Programming the LO Register

---

Use the Neptune field programmer to select the ProRead Program tab for programming.



1. Select **RF Compound LO** format.

2. Match the **Connectivity 2W**.

3. Match the **Dial Code 65**.

4. Type the appropriate **Register ID**.

5. Program the register.

Figure 18: LO Register

6. Read or query the register to confirm correct programming.

## 6: Wiring Networked Registers

Complete the following steps to wire the networked registers.

1. Connect each color wire with the appropriate color wire from the pigtail and both registers, until all three colors have been successfully connected.

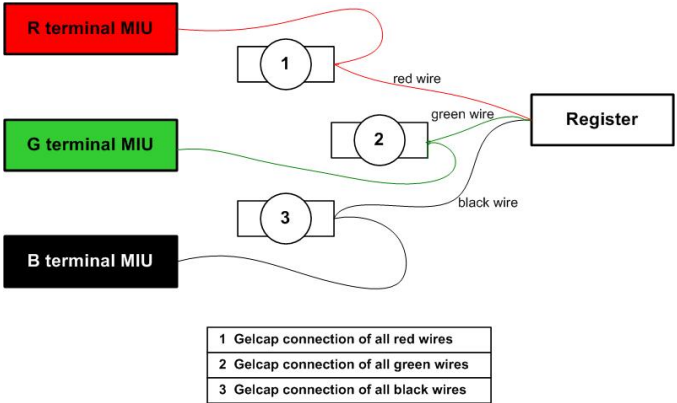


Figure 19: Interconnection of Like Terminals

Remove any bare or non-insulated wire. Insert only insulated wire into the splice connector.



Observe proper polarity as shown in the above figure, when wiring the registers so that all terminals are interconnected with wires of the same color: red, black, or green.

2. Proceed with "Activating the E-CODER®" on page 15.

## 7: Crimping Tool Manufacturers

To apply the Scotchlok™ connectors, you need a proper crimping tool. The following table shows a list of various manufacturers and model numbers.



To reduce fatigue, use a tool within each splicing group with the highest mechanical advantage indicated within the parentheses ( ).

**Table 2: Crimping Tools**

Manufacturer	Model Number
3M	<ul style="list-style-type: none"><li>• E-9R (10:1)</li><li>• E-9BM (10:1)</li><li>• E-9C/CW (7:1)</li><li>• E-9E (4:1) E-9Y (3:1)</li></ul>
Eclipse Tools	100-008



Use of normal pliers or channel locks is highly discouraged because they do not apply even pressure and can result in an improper connection.

## 8: Activating the E-CODER<sup>®</sup>

To read the E-CODER<sup>®</sup> you must first activate it. Complete the following steps to activate the E-CODER.

1. Expose the E-CODER to sunlight or activate with a flashlight for five seconds.



If you can power on the LCD, but there is insufficient light to read the ASCII, the LCD displays LO Light.



Figure 20: LCD Displays LO Light

Verify the following LCD displays the :

- All-Segment test
- Version number
- Flow rate

The display alternates between the reading and the flow rate.

## 9: Reading the E-CODER®

It is important to become familiar with the information available from the meter. Table 3 on page 16 lists various icons and displays along with a description.

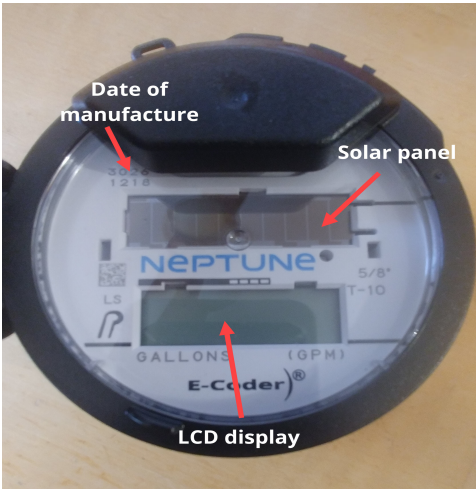




Figure 21: E-CODER® Displays

**Table 3: Icons and Displays**

Icon	Description	
	Flow / Leak Indicator shows the direction of flow through the meter:	
	ON	Water in use
	OFF	Water not in use
	Flashing	Water is running slowly / low flow indicator
	+	Forward flow
	-	Reverse flow



**Table 3: Icons and Displays (continued)**

Icon	Description	
	Leak indicator displays a possible leak:	
	OFF	No leak
	Flashing	Intermittent leak indicated. Water used during at least 50 of the last 96 15-minute interval data updates within the past 24 hours.
Continuous ON	Continuous leak indicated. Water used during all 96 15-minute interval data updates within the past 24 hours.	
RATE – Rate of Flow. Average flow rate is displayed every 12 seconds on the LCD display.		

The following table shows the LCD display and what the icons and numbers mean.

**Table 4: LCD Display**

LCD Display	Description
<p>Nine-digit LCD displays the meter reading in billing units (U.S. gallons left to right):</p>	<div data-bbox="378 388 896 644" data-label="Image"> </div> <ul style="list-style-type: none"> <li>• (1) E-CODER Basic Reading / Customary- 6-digit remote reading</li> <li>• (2) Customary sweep hand digits</li> <li>• (3) E-CoderPLUS Reading – 8-digit remote reading</li> </ul>

If the leak indicator is Flashing or Continuously ON, it indicates a possible leak. The following table contains some common causes of potential leaks.

**Table 5: Causes of Leaks**


Possible Cause of Leak	Intermittent Leak	Continuous Leak
Outside faucet, garden hose, or sprinkler system leaking	✓	✓
Toilet valve not sealed properly	✓	✓
Toilet running		✓

**Table 5: Causes of Leaks (continued)**

Possible Cause of Leak	Intermittent Leak	Continuous Leak
Faucet in kitchen or bathrooms leaking	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Ice maker leaking		<input checked="" type="checkbox"/>
Soaker hose in use		<input checked="" type="checkbox"/>
Leak between the water meter and the house		<input checked="" type="checkbox"/>
Washing machine leaking	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Dishwasher leaking	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Hot water heater leaking		<input checked="" type="checkbox"/>
Yard watered for more than eight hours	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Continuous pet water device in use		<input checked="" type="checkbox"/>
Water-cooled air conditioner or heat pump	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Swimming pool filled		<input checked="" type="checkbox"/>
Other continuous use of water for 24 hours		<input checked="" type="checkbox"/>

## 10: How to Tell if Water is in Use

To determine if water is in use, complete the following steps.

1. Watch the flow indicator  for two minutes.
2. Determine which of the following conditions exists. If the arrow is:
  - Flashing, then water is running very slowly.
  - Continuously on, then water is running.
  - Not flashing, then water is not running.

### What To Do In Case of a Leak

---

The following checklist can be helpful if the E-CODER<sup>®</sup> leak indicator shows a possible leak.


**Table 6: Checklist for Leaks**

<input checked="" type="checkbox"/>	Check all faucets for possible leaks.
<input checked="" type="checkbox"/>	Check all toilets and toilet valves.
<input checked="" type="checkbox"/>	Check the ice maker and water dispenser.
<input checked="" type="checkbox"/>	Check the yard and surrounding grounds for a wet spot or indication of a pipe leaking.

## If a Continuous Leak is Repaired

---


If a continuous leak is found and repaired, complete the following steps.

1. Use no water for at least 15 minutes.
2. Check the leak icon . If the leak indicator changes from Continuously ON to Flashing, then a continuous leak is no longer indicated.

## If an Intermittent Leak is Repaired

---

If an intermittent leak is found and repaired, complete the following steps:

1. Check the leak icon  after at least 24 hours. If the leak has been correctly repaired, the leak changes from Flashing to OFF.
2. Refer to the following tables which describe the standard functions of the E-CODER flags.

**Table 7: E-CODER® Flags**

Flag	Description
<b>Backflow Flag (Resets After 35 Days)</b>	
Based on reverse movement of the eighth digit, the eighth digit is variable based on the meter size.	
No backflow event	Eighth digit reversed less than one digit
Minor backflow event	Eighth digit reversed more than one digit up to 100 times the eighth digit
Major backflow event	Eighth digit reversed greater than 100 times the eighth digit

**Table 7: E-CODER® Flags (continued)**

Flag	Description
Flashing leak icon	Eighth digit incremented in 50 of the 96 15-minute interval data updates within the past 24 hours
Solid leak icon	Eighth digit incremented in all of the 96 15-minute interval data updates within the past 24 hours
<b>Leak Status Flag (Resets After 35 Days)</b>	
Based on total amount of 15-minute periods recorded in the previous 24 hours	
Leak icon off	Eighth digit incremented in less than 50 of the past 96 15-minute interval data updates
<b>Consecutive Days with Zero Consumption Flag (Resets After 35 Days)</b>	
Number of days the “leak status” was at a minimum value	

## 11: Contact Information

Within the United States, Neptune Customer Support is available Monday through Friday, 7:00 A.M. to 5:00 P.M. Central Standard Time, by telephone or email.

### By Phone

---

To contact Neptune Customer Support by phone, complete the following steps.

1. Call **(800) 647-4832**.
2. Select one of the following options:
  - Press **1** if you have a Technical Support Personal Identification Number (PIN).
  - Press **2** if you do not have a Technical Support PIN.
3. Enter the six-digit **PIN** and press **#**.
4. Select one of the following options:
  - Press **2** for Technical Support.
  - Press **3** for maintenance contracts or renewals .
  - Press **4** for Return Material Authorization (RMA) for Canadian Accounts.

You are directed to the appropriate team of Customer Support Specialists. The specialists are dedicated to you until the issue is resolved to your satisfaction.







**Neptune Technology Group Inc.**

1600 Alabama Highway 229  
Tallassee, AL 36078  
USA Tel: (800) 633-8754  
Fax: (334) 283-7293

**Neptune Technology Group**

(Canada) Ltd.  
7275 West Credit Avenue  
Mississauga, Ontario L5N 5M9  
Canada Tel: (905) 858-4211  
Fax: (905) 858-0428

**Neptune Technology Group Inc.**

Avenida Ejercito Nacional No 418  
Piso 12, Despacho 1203  
Colonia Polanco V Sección  
C.P. 11560 Delegación, Miguel Hidalgo  
Mexico D.F.  
Tel: (55) 5203-5708, (55) 5203-4032,  
(55) 5203-5294

Online  
[www.neptunetg.com](http://www.neptunetg.com)

QI E-CODER® 6.19 / Part No. 12563-001  
©Copyright 2017 -2019  
Neptune Technology Group Inc.  
Neptune is a registered trademark of  
Neptune Technology Group Inc.